Dave Langer (Creative Services)

SONIFEX



DIGITAL I/O ANALOGUE RADIO BROADCAST MIXER



S2 is a new breed of radio broadcast mixer. Using the latest technology components, S2 offers digital audio quality with analogue reliability in a modular format. S2 has both digital and analogue input channels, together with simultaneous analogue and digital outputs.

Following on from the Sovereign range of audio mixers, S2 combines all the features needed of a radio broadcast mixer in a stylish, flush-mounting chassis: a wide range of input and output channels, PFL/cue, fader-start operation of equipment, automatic monitor muting on mic-live, light controlling remote outputs, optional EQ on input modules, gram amp input options and 2 main audio buses, allowing you to broadcast on the PRG bus while recording on the AUD bus, with bus output selection on each module.

Innovative Design

- The S2 chassis is available in 5 module width sections, allowing 5, 10, 15, 20, 25 and 30 module width mixers. This means S2 can be used for small newsrooms or large on-air situations.
- Modular "pop-up" input and output channels means that the mixer can be maintained simply and quickly. Hot-swappable input channels can be individually removed and repaired whilst still on-air.
- The angle of the meterbridge can be varied and set for best viewing position.
- Any module can be in any position so that customizing the mixer for your own purposes is easy.
- Large back-lit buttons allow you to see the status of the mixer at all times.
- The fitted rear panel hides all cable connections but can be simply unclipped and reclipped for maintenance.
- The modular design of the desk gives you the flexibility to expand it at a later date. You can even add another S2 mixer and link them together with a bus connector cable to allow for split desk configurations.



Superb Audio Quality and Unquestionable Reliability

- The S2 uses the latest Crystal semiconductor technology to allow input and output of digital audio signals up to 24 bit, 96kHz sample rate.
- The analogue signal paths use low noise circuitry to provide superb audio performance well capable of satisfying radio listeners worldwide.
- The high reliability and build quality of S2 minimises the chance of failure, avoiding lost air-time. Each module is individually checked twice before being assembled into the finished chassis and the whole unit is tested before shipping.
- ALPS long throw 100mm faders give a smooth, repeatable response and the XLR Neutrik connectors used are an industry standard.
- The use of VCAs controlled by the faders ensures tight stereo tracking and eliminates mechanical and electronic noise.
- S2 has a separate 2U power supply providing regulated, ripple-free power to the mixer. There is also an optional switcher to control 2 power supplies providing redundancy.
- High quality stainless steel is used for the chassis and screws to prevent corrosion in high humidity environments.
- Each channel is metal coated internally to provide exceptional EMC screening.

S2 Input Channels

There is a wide choice of input channels for the S2 mixer. Each channel has a number of common features :

Assigning an Input Channel to an Output Bus - Switches at the top of the channel are used to select the output group routing, to either Program, Audition, or both output busses. Selecting the PGM and/or AUD buttons routes the channel audio to the PGM and/or AUD mix busses. The buttons illuminate green to indicate the routing status.

Changing the Input Level - Coarse gain is set using preset potentiometers on the channel circuit board (see back page for gain ranges) which allow unbalanced inputs to be used on mono and stereo line inputs. The front panel TRIM control allows fine gain of ±12dB.

Changing the Signal Pan, or Balance - the BAL/PAN control is used on mono channels to pan the mono input signal in the stereo image and on stereo channels to balance the stereo image.

CUE/PFL (Pre Fade Listen) - Selecting the CUE/PFL button routes the pre-fader input signal to the monitoring system where the signal can be heard via headphones and/or loudspeakers. The button lights green

when CUE/PFL is active and a jumper option is available to cancel the CUE/PFL selection when the fader is raised. This button works with both a momentary and latched operation - if held down, the selection is cancelled on release, otherwise the button is alternate action.

Fader Start & ON Button Control - The ON button works in conjunction with the 100mm long-throw carbon fader and is used to control channel remotes (e.g. starting a CD player), routing and timers, etc. When unlit, the channel is off. Flashing red indicates that the channel has been selected to ON but not routed to either PGM or AUD. Steady red indicates that the channel is ON and "armed", ready for the fader to be raised. Raising the fader changes the illumination to green indicating that the channel is live. Alternatively, with the button unlit the fader may be raised and the channel can be operated simply by selecting ON. The illumination in this case toggles between unlit (channel OFF) and green (channel ON).

Scribble Pad - A scribble pad is provided at the bottom of the channel for user labelling of the channel function.



S2-CMM Mic/Mic Channel

The Mic/Mic Input channel is a dual mono microphone input with a button switch to select either Mic 1 or Mic 2.

Each Mic input has jumper settable phantom power available at +48V and a high pass filter to remove low frequency rumbles. When enabled, the LF response of the microphone is rolled off at 125kHz, 6dB per octave.

If the Mic input is used for the presenter's mic it can also become the talkback mic.

Equalisation is fitted as standard on this channel and is enabled by the EQ button, providing 10dB cut and boost at HF (6.5kHz) and LF (100Hz).

The BAL/PAN control operates as follows: Full anti-clockwise pans the signal to the left and increases the signal by 3dB (right channel reduces by 70dB); full clockwise pans the signal to the right and increases the signal by 3dB (left channel reduces by 70dB).

A balanced line level insert send and return is available for the Mic input. This is useful for hooking up an outboard effects unit to be

Mic Cough muting and Reverse Talkback, together with two separate output controls for Mic Cue lights, which can be momentary or latching.

output to facilitate either Control Room speaker or Studio speaker muting and the channel can also be used to control either one of two separate timer displays.

for the audio inputs and outputs.



S2-CML Mic/Line Channel

The Mic/Line Input channel is a mono input with a button switch to select either Mic or Mono Line.

For the Mic input, phantom power at +48V can be configured. The Mic input has a jumper selectable high pass filter to remove low frequency rumbles.

If the Mic input is used for the presenter's mic it can also become the talkback mic. The talkback function will be retained when the channel input is switched to Line.

Equalisation is fitted as standard on this channel and is enabled by the EQ button, providing 10dB cut and boost at HF (6.5kHz) and LF (100Hz).

A balanced line level insert send and return is available for the Mic input for the insertion of an effects, or voice, processor into the mic channel. The send and return is disabled in Line mode.

There are logic remote input controls for Mic Cough muting and Reverse Talkback. There are output controls for Mic Cue lights and separate line remote start/stop controls by fader or ON button. Both latching and momentary contacts are catered for.


The remote outputs on the 9 way D type plug are fed from NPN opto-isolators.

The Mic input provides a jumper selectable output to facilitate either Control Room speaker or Studio speaker muting and the channel can also be used to control either one of two separate timer displays.

In addition the Line input can be configured with all the features of the Mic input when used as a Mic input with an external microphone amplifier, e.g. for monitor muting purposes.

Gold plated Neutrik XLR connectors are used for the audio inputs and outputs.



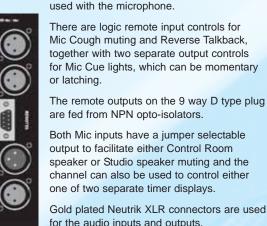



Stereo Line & Gram

S2-CS Dual Stereo Line Channel
S2-CSE Dual Stereo Line Channel
with EQ

The Dual Stereo Line channel has two balanced stereo inputs on Neutrik XLR connectors.

The INP 1/INP 2 button selects which input is routed through the channel. The button is illuminated in red to indicate when Input 2 is selected. The operation of the button is inhibited when the channel is "live".

There are separate logic remote output controls for both of the two inputs providing start/stop functions by fader, or ON button. Remotes, etc, are triggered when the fader is up and the channel ON button shows green. The start function can be configured to be either momentary (500mS) or latched for each input. The remote outputs on the 9 way D type plug are fed from NPN opto-isolators.

Continuous momentary start can also be enabled such that when the fader is up and the channel is on, each press of the ON button triggers a momentary start.

The BAL/PAN control adjusts the stereo balance in the following manner: Full anti-clockwise shifts the signal to the left and increases the signal by 6dB (right channel reduces by 6dB); full clockwise shifts the signal to the right and increases the signal by 6dB (left channel reduces by 6dB).

The 100mm VCA fader provides unity gain when fully open. The channel input signal is routed to the outputs whenever the fader is

open, the ON button is selected and either or both of the routing buttons are selected.

The **S2-CSE** channel is the Dual Stereo Line channel as above but fitted with equalisation, providing 10dB cut and boost at HF (6.5kHz) and LF (100Hz). The EQ button places the equalisation in and out of the signal path. The button is illuminated in yellow when the EQ is active.

The channel can be used to control either one of two separate timer displays.



AUD

LINE O



Channel
S2-CSGE Stereo Line & Gram
Channel with EQ

This channel is the Dual Stereo Line channel

S2-CSG

fitted with an RIAA input amplifier on the second input. The balanced stereo line input is on Neutrik XLR connectors and the unbalanced RIAA stereo input on phonos.

The channel is used for connecting a turntable or record deck. The GRAM inputs have RIAA equalisation suitable for magnetic pick-up cartridges.

Selecting the LINE/GRAM button switches the channel input between Stereo Line and RIAA . The button is illuminated in red to indicate when Gram (RIAA) is selected. The operation of the button is inhibited when the channel is "live".

There are separate logic remote output controls for both of the two inputs providing start/stop functions by fader, or ON button. Remotes, etc, are triggered when the fader is up and the channel ON button shows green. The start function can be configured to be either momentary (500mS) or latched for each input. The remote outputs on the 9 way D type plug are fed from NPN opto-isolators.

Continuous momentary start can also be enabled such that when the fader is up and the channel is on, each press of the ON button triggers a momentary start.

The BAL/PAN control adjusts the stereo balance in the following manner: Full anti-clockwise shifts the signal to the left and increases the signal by 6dB (right channel reduces by 6dB); full clockwise shifts the signal to the right and increases the signal by 6dB (left channel reduces by 6dB).


The 100mm VCA fader provides unity gain when fully open. The channel input signal is routed to the outputs whenever the fader is

open, the ON button is selected and either or both of the routing buttons are selected.

The **S2-CSGE** channel is the Stereo Line & Gram channel as above but fitted with equalisation, providing 10dB cut and boost at HF (6.5kHz) and LF (100Hz). The EQ button places the equalisation in and out of the signal path. The button is illuminated in yellow when the EQ is active.

The channel can be used to control either one of two separate timer displays.



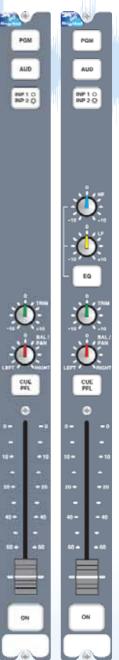

S2-CDS **Digital Dual Stereo Channel**

The Digital Dual Stereo channel has two 24-bit 96kHz digital inputs with an INP 1/INP 2 button switch to select between them. The button is illuminated in red to indicate when Input 2 is selected. The operation of the button is inhibited when the channel is "live".

Either input can be configured to be balanced AES/EBU on standard XLR, or S/PDIF on phono sockets, selected by internal jumpers.


An additional jumper option can be used to decode emphasis when indicated by certain status bits in the incoming data stream.

The digital signals are converted to analogue and from this point the channel functions are the same as the S2-CS Dual Stereo Line channel with the addition that when the ON button flashes green, it means that there is no valid digital input.

S2-CDSE Digital Dual Stereo Channel with EQ

This channel is the Digital Dual Stereo

channel as above but fitted with equalisation.

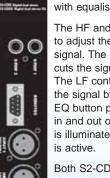

The HF and LF controls are used to adjust the equalisation of the signal. The HF control boosts and cuts the signal by 10dB at 6.5kHz. The LF control boosts and cuts the signal by 10dB at 100Hz. The EQ button places the equalisation in and out of the signal path and is illuminated yellow when the EQ

Both S2-CDS and S2-CDSE either one of two separate

S2-C6SS 6 Way Stereo Source Select Channel With EQ

AUD

0

0

ò

The 6 Way Stereo Line Source Select channel has 6 balanced stereo inputs on a 25 way D-type connector selectable by a 6 way mechanical interlocking switch bank, numbered 1 - 6. A depressed button indicates the selected input.

The switch bank also controls 6 sets of remote outputs allowing each source to have a set of start/stop remotes. The remote starts can be set as momentary or latching.

Continuous momentary start can also be enabled such that when the fader is up and the channel is on, each press of the ON button triggers a momentary start.

The channel is fitted with EQ as standard and other functions are similar to the S2-CSE Dual Stereo channel with EQ.

The HF and LF controls are used to adjust the equalisation of the signal. The HF control boosts and cuts the signal by 10dB at 6.5kHz. The LF control boosts and cuts the signal by 10dB at 100Hz. The EQ button places the equalisation in and out of the signal path and is illuminated yellow when the EQ is active.

The channel can be used to control either one of two separate timer displays.



FROM PGM OUTPUT L

FROM PGM OUTPUT R

channels can be used to control timer displays. S2-CSG Stereo Line with Gram (S2-CSGE with EQ), S2-CS Dual Stereo (S2-CSE with EQ), S2-CDS Digital Dual Stereo (S2-CDSE with EQ), S2-CSMM Stereo Mix Minus, S2-C6SS Stereo Source Select TO S2-OMC & S2-OMS CPU CPU

I FET INPUT AME

STEREO SELECTOR VERSION


6 x REMOTE

S2-CB Blank Channel

This blank channel is used to fill in areas of the mixer where you don't require an input or output channel.

INPUT 1 AES/EBU

INPUT 1 REMOTES INPUT 2 REMOTES

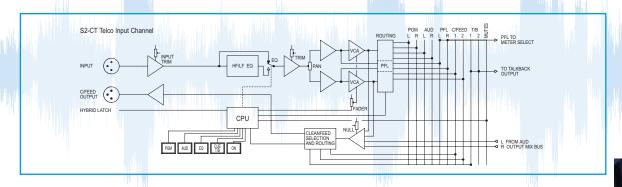

S2-CSMM Stereo Mix Minus Channel

The Stereo Mix-Minus channel has one balanced stereo line level input and a balanced stereo mix-minus output, on XLR connectors. The channel is intended for use where a remote stereo source, such as another studio connected via ISDN, requires a stereo cleanfeed return. The cleanfeed is generated by the mix-minus method from either the PGM or AUD outputs, depending on the routing selection.

Selecting the CUE/PFL & T/B button routes the pre-fader input signal to the monitoring system where the signal can be heard via headphones and/or loudspeakers. In addition, talkback is routed to the cleanfeed output. This enables the presenter/technical operator to communicate with the remote source prior to going live to air. PFL can be automatically disabled when the fader is opened.

The outputs on the this channel can also be configured by jumper settings as a mono sum of mix-minus on the left channel and continuous talkback on the right channel (for some ISDN codecs and hybrid applications).

The fader, or ON button, control a logic remote output function. The remote function can be configured to be either momentary or latched. The remote outputs on the 9 way D type plug are fed from NPN opto-isolators.

Continuous momentary start can also be enabled such that when the fader is up and the channel is on, each press of the ON button triggers a momentary start.

Selecting the PGM and/or AUD buttons routes the channel audio output to the PGM and/or

AUD mix busses. Selecting the PGM button also routes the PGM main output via the mix minus system to the cleanfeed output. Selecting the AUD button routes the AUD main output to the mix minus system. The mix minus is derived from the PGM output when selecting both PGM and AUD.

Equalisation is fitted as standard on this channel and operates in the same was as on the S2-CDSE channel.

The channel can be used to control either one of two separate timer displays.

S2-CT Telco Input Channel

The Telco Input channel controls the connection to a telephone balance unit (or hybrid). It has one balanced line level mono input on Neutrik XLR, and one balanced line level cleanfeed output to return to the hybrid.

Selecting the CUE/PFL & T/B button routes the pre-fader input signal to the monitoring system where the signal can be heard via headphones and/or loudspeakers. In addition, talkback is automatically routed back to the caller via the cleanfeed system. This enables the presenter, or technical operator, to communicate with the caller prior to putting the caller live to air. PFL can be automatically disabled when the fader is opened.

There is a logic remote output to place the hybrid "on hold" by using the LINE HOLD button. The remote output on the 9 way D type plug is fed from an NPN opto-isolator and it can be made momentary or latching.

Selecting the PGM and/or AUD buttons routes the channel audio output to the PGM and/or AUD mix busses. The buttons are illuminated in green to indicate the routing status. Changing the status of the PGM button is inhibited when the channel is "live".

Selecting the PGM button also routes the channel to one of the two true cleanfeed busses (jumper selectable). When selecting only the AUD button, for example to record off-line telephone conversations, a cleanfeed

is generated via the channel mix-minus system. When both PGM and AUD are selected the channel operates in the true cleanfeed mode, sending the PGM signal to the cleanfeed bus.

Equalisation is fitted as standard and is enabled by the EQ button, providing 10dB cut and boost at HF (6.5kHz) and LF (100Hz). The EQ button places the equalisation in and out of the signal path and is illuminated yellow when the EQ is active.





S2 Output Channels

There are six different output channels available, for controlling monitoring in both a Control Room and separate Studio, with the two main output channels also having a master fader option.

The master output channels provide balanced analogue audio outputs as well as simultaneous AES/EBU or S/PDIF digital audio outputs for both PRG and AUD busses. The analogue mono output can be selected from PRG or AUD and meter selection is available to show

either the PRG bus, AUD bus, or to follow the Control Room Monitor selection.

Both Control Room and Studio Monitor channels are available for controlling what's routed to the presenter's and guests' headphones and monitor speakers. 2 external inputs can also be monitored.


A minimum of 3 channels need to be fitted into a mixer: channels S2-OMC, S2-ODP (or S2-ODPF) and S2-ODA (or S2-ODAF) must be fitted and S2-OMS is optional.





SPLIT CUE/PFL



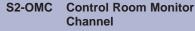

The Control Room Monitor channel is used for the monitoring of various sources on the control room loudspeakers (MONITOR) on a 6.35mm stereo jack socket and presenter's headphones (PHONES) on 6.35mm stereo jack sockets. Front panel control knobs are used to vary the monitor and headphone levels and headphones can be plugged in on the front or the rear of this channel. The control room monitor loudspeaker and headphone levels are variable between 0 (cut off) and 10 (max).

A four way electronically interlocking switch bank selects the source routed to the speakers and headphones from either of two external inputs (EXT 1, EXT 2), the PGM, or AUD output. The buttons illuminate to show the selected source, PGM and AUD in green, EXT 1 and EXT 2 in red. The external inputs can be used for monitoring an off air signal or another studio output.

An illuminated Mute LED shows when a live microphone channel in the control room has muted the speakers, to prevent feedback. Mute outputs on the remote connector of the PGM output channel can be used to remotely illuminate "Mic Live" lights.

AUTO CUE/PFL buttons adjacent to each level control allow the monitoring of PFL when an input channel has been selected to CUE/PFL. In addition, SPLIT CUE/PFL can be selected to the headphones, which will place the selected source in mono in one ear and PFL in mono in the other.

This channel controls the signal conditioning for the talkback input and output and routes these signals to and from the talkback bus. Internal jumpers can be configured to allow talkback to replace or dim the selected source, dimming independently on monitor speakers or headphones.

A Global Talkback system can be configured to allow every contribution point in the control room and studio to communicate with each other via their microphone and headphones.











S2-OMS Studio Monitor Channel

The Studio Monitor channel is used for the monitoring of various sources on the studio loudspeakers (MONITOR) on a 6.35mm stereo jack socket and studio headphones (PHONES) on a 6.35mm stereo jack socket.

A front panel control is used to vary the monitor level. The studio monitor loudspeaker level can be variable between 0 (cut off) and 10 (max). The output will need to be fed to a suitable power amplifier to drive the loudspeakers. Headphones with impedances of 35 ohms and above can be driven directly from the channel headphone connector on the rear panel.


A four way electronically interlocking switch bank selects the source routed to the speakers and headphones from either of two external inputs (EXT 1, EXT 2), the PGM, or AUD output. The buttons illuminate to show the selected source, PGM and AUD in green, EXT 1 and EXT 2 in red. External inputs can be used for monitoring an off air signal or another studio output.


An illuminated Mute LED shows when a live microphone channel in the studio has muted the speakers. Mute outputs on the remote connector of the AUD output channel can be used to remotely illuminate "Mic Live" lights.

Green illuminated AUTO CUE/PFL buttons adjacent to each level control allow the monitoring of PFL when an input channel has been selected to CUE/PFL, either to the monitors or headphones.

A separate Studio T/B button is provided to allow the presenter/engineer to talk to the studio monitors and/or headphones and internal jumpers allow this talkback to replace or dim the selected source.

A Global Talkback system can be configured to allow every contribution point in the control room and studio to communicate with each other via their microphone and headphones.

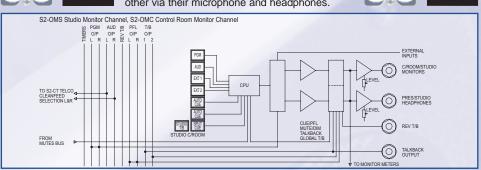

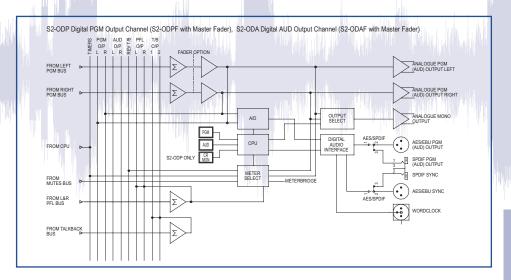

S2-ODP **Digital PGM Output** Channel **Digital PGM Output** S2-ODPF

Channel with Master Fader

This channel is common to every mixer and provides a digital and analogue output from the PGM mix bus. The digital output is available as a balanced AES/EBU signal via a standard XLR or as S/PDIF on phono sockets. The balanced analogue PGM output and mono output is on a 15 way D type connector. This also carries the two sets of latching relay contacts for the control room mutes.

The main power input from the S2-PSU is on this channel.

Button switches at the top of the channel select the mono output source from either PGM or AUD. The Mono compatible output could be used to feed a mono transmitter or any station output monitoring system that requires a mono signal, such as a background music system.

The digital output status bits (consumer or professional), output sample size (16, 20 or 24 bits) and sample rate (automatically or by internal jumpers from 32 kHz to 96 kHz) can be set. The digital output can be synchronised from an external input, or from an on-board

> master clock. There are 4 different sync modes: Master, Auto, Auto Lock and Slave.

> The illuminated LOCK LED shows that the digital output is locked to the onboard master clock, incoming Word clock or AES/ EBU or S/PDIF sync signal. The channel automatically locks to a valid sync clock, flashing if sync is lost. Synchronisation can be jumper disabled.

The S2-ODPF channel also has a 100mm VCA output fader for production use which provides unity gain when fully open.




S2-ODA **Digital AUD Output** Channel S2-ODAF **Digital AUD Output Channel with Master** Fader

This channel is also common to every mixer and provides a digital and analogue output from the AUD mix bus. The digital output is available as a balanced AES/EBU signal via a standard XLR or as S/PDIF on phono sockets. The balanced analogue AUD outputs are available on a 15 way D type connector which also carries the two sets of latching relay contacts for the studio mutes.

Button switches at the top of the channel select the monitoring source to the meterbridge. Meters in the meterbridge which are connected to the "Monitor Meter" position will display the selected signal from the electronically interlocking PGM, AUD, or CR MON buttons. The CR MON signal source is whatever is being monitored on the presenter's headphone on the control room monitor channel, pre talkback and level control. This signal could be PGM, AUD, EXT 1, EXT 2, or PFL, as selected by the presenter.

The digital output status bits (consumer or professional), output sample size (16, 20 or 24 bits) and sample rate (automatically or by internal jumpers from 32 kHz to 96 kHz) can be set. The digital output can be synchronised from an external input, or from an on-board master clock. There are 4 different sync modes: Master, Auto, Auto Lock and Slave.

The illuminated LOCK LED shows that the

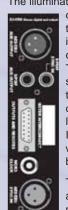

digital output is locked to the onboard master clock. incoming Word clock or AES/EBU or S/PDIF compatible sync signal. The channel automatically searches for a sync signal on the Word Clock, or the selected digital input, and automatically locks to a valid sync clock. If sync is lost then the indicator will flash. Synchronisation can be jumper disabled.

The S2-ODAF channel also has a 100mm VCA output fader for production use which provides unity gain when fully open.



Meterbridge Modules

In the meterbridge area you can choose from four styles of metering, a dual timer, a PFL/Talkback loudspeaker, 2 talkback modules and a range of blanking plates. S2's meterbridge modules are freely assignable so that you can position them exactly where you want them.

The dual meter panels are used for monitoring console signal levels. Up to three different meter panels can be housed in the meterbridge. The meters can be configured internally to be fed from one of three signal sources, the selected source indicated by a LED:

Select

The output of the meter switch on the AUD output module which can show PGM, AUD, or CR MON, which is the selected monitor source on the control room monitor module, (EXT 1, EXT 2, PGM, or AUD) interrupted by PFL.

Program PGM output which can optionally be interrupted by PFL.

PFL The output of the PFL bus.

S2-MPPM Meterbridge PPM Meter Panel S2-MPPT Meterbridge True PPM Meter Panel



The S2-MPPM panel has two fast-reading moving-coil meters with PPM-style scale.

The S2-MPPT panel has two moving-coil PPM movements, conforming to true PPM ballistics.

The PPMs have a 1-7 scale and are configured such that a 1kHz signal, at 0dB at the PGM output, will indicate a meter reading of 4. Each mark on the PPM scale indicates a 4dB change in signal level.

S2-MVU Meterbridge VU Meter Panel



The S2-MVU two moving coil VU meters are configured such that a 1kHz signal, at +4dBu at the PGM output, will indicate a meter reading of 0VU.


S2-ML53 Meterbridge LED Meter Panel



The LED meter consists of 53 LEDs showing both VU and peak representation. Both PPM and VU scales are shown, one on each side of the LED bar-graph.


S2-MTBS Meterbridge Station Master Talkback Panel

This is used for interfacing with a Sonifex Station Master studio switcher and talkback router and has buttons for talkback, Offer and Accept switching and profanity delay control.

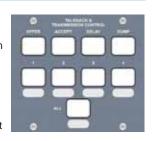

S2-MTB6 Meterbridge 6 Way Talkback Panel

This is used for communicating with up to 6 other locations, studios or mixers. While a button is pressed, the switch is illuminated and the talkback is

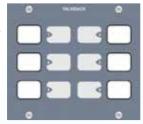

active. The buttons work with both a momentary and latched operation - if held down, the selection is cancelled on release. Otherwise the button is alternate action.

S2-MT Meterbridge Dual Timer Panel

Each of the dual timers can be used for timing events triggered by Timer 1, Timer 2, or the Mic fader open signal. In addition the upper timer is used for



displaying the time of day and the lower timer for displaying the date. The illumination pattern of the red LEDs indicates the timer display mode.

The date and time can be synchronised to a very accurate internal clock or optionally from an external source, MSF, DCF, SMPTE, or RS232 time code string.

S2-ML Meterbridge Loudspeaker Monitor Panel


The S2-ML speaker is used for monitoring PFL and reverse talkback in the control room directly from the mixer.
Two control



knobs are provided for adjusting the levels of the PFL and Talkback signals from cut-off at 0 to unity gain at 10. The speaker is muted automatically when the control room mute is active, to prevent feedback.

S2-MB1-5 Meterbridge Blanking Plates 1 - 5

Meterbridge blanking plates are available in channel widths from 1 to 5 inclusive and are used to fill areas in the meterbridge not occupied by active modules.

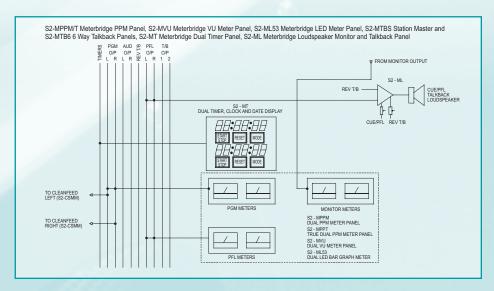

Chassis Design

The S2 chassis is available in 5 channel width sections, allowing 5, 10, 15, 20, 25 and 30 channel width mixers. This means S2 can be used for small newsrooms or large on-air situations.

S2-15 Chassis

Chassis with 15 channel width sections.



S2-25 Chassis

Chassis with 25 channel width sections.



S2-05 Chassis With 5 channel width sections.



S2-20 Chassis

Chassis with 20 channel width sections.



S2-10 Chassis

Chassis with 10 channel width sections.



S2-30 Chassis

Chassis with 30 channel width sections.



Model No.	Number of Channels	Model No.	Number of Channels	
S-05	5	S-20	20	
S-10	10	S-25	25	
S-15	15	S-30	30	

S2-PSU Power Supply

The S2-PSU is a 2U high rack-mount unit, which supplies power to the entire range of S2 mixers. A lead with a special 9 pin D-Type socket on each end is used to connect the power supply to the S2-ODP PGM output channel on the mixer.

Four LED's on the front of the unit indicate whether the power to the four voltage rails is being supplied correctly.

S2-PSUS Dual Power Supply Switcher

The S2-PSUS is a power switcher which takes the power feeds from 2 x S2-PSU units and switches between them in the event of failure. With LED failure indicators and GPI alarms, the S2-PSUS is the perfect dual redundant power supply module.



S2-PSU Front Panel.



S2-PSU Back Panel.

S2-BI Bus Interlink Cable



This is used to connect two S2 chassis so that they can function as one mixer. Note that a maximum total of 30 channels is allowed.

S2-7SS Script Space



The Script Space occupies an area of 7 channel widths, and is designed to hold documents or scripts for the mixer operator when desk space is at a premium.



SONIFE

Sonifex is a BABT approved manufacturing facility with a licence to build telecommunications BS7002, BS415 and CTR21.

S2 Technical Specification

Input/Output Impedances

Mic Input: > 1k5 ohms electronically balanced

Mono Line Input: > 20k ohms electronically balanced

Stereo Line Input: > 20k ohms electronically balanced PGM & AUD Output: < 75 ohms electronically balanced < 75 ohms electronically balanced Mono Output:

Monitor Outputs: < 75 ohms unbalanced

AES Input/Output: 110 ohms S/PDIF Input/Output: 75 ohms BNC Wordclock input: 50 ohms

Input/Output Gain Range

Preset pot +13dB to +66dB ref Mic Input: -50dBu, TRIM pot ±12dB

Mono Line Input: Preset pot -6dB to +10dB ref 0dBu, TRIM pot ±12dB

Stereo Line Input: Preset pot -6dB to +10dB ref 0dBu, TRIM pot ±12dB Preset pot -6dB to +10dB ref Telco Input:

0dBu, TRIM pot ±12dB

Telco Output: Preset pot -6dB to +4dB ref 0dBu

Mix Minus Input: Preset pot -6dB to +10dB ref

0dBu, TRIM pot ±12dB Mix Minus Output: Preset pot -3dB to +3dB ref 0dBu

0dBFS = +12dBu on input; Digital Input: TRIM pot ±12dB allowing 0dBu to

+24dBu

Digital Output: 0dBFS = +18dBu

Frequency Response

Mic Input: 40Hz to 20kHz, -1dB,+0dB (-3dB

at 130Hz with HPF in) Line Inputs: 20Hz to 20kHz, - 0.5dB,+0dB 30Hz to 16kHz ±1.5dB RIAA RIAA Input: equalised

Noise (20Hz to 20kHz)

Mic Input E.I.N.: Stereo Inputs

-129dB with 150 ohm source -89dB ref 0dB

(fader down, no routing):

Stereo Inputs(fader down, -89dB one channel routed):

Stereo Inputs (unity gain, -89dB no routing):

Stereo Inputs (unity gain, -86dB one channel routed):

Stereo Inputs (unity gain, two channels routed):

Distortion

Total Harmonic Distortion: 0.015% at 1kHz_0dB

0.025% at 10kHz, 0dB

Crosstalk

Inter-channel: < -90dBu Stereo: -90dBu at 1kHz -87dBu at 10kHz

Equalisation

LF Shelving at 100Hz: ±7dB HF Shelving at 6.5kHz: ±7dB

Range

Pan Range: Pot position: Fully clockwise,

-83dB

centre, fully anti-clockwise; Left: Off, 0dB, +3dB; Right: +3dB,

0dB, Off respectively.

Balance Range: ±6dB Common Mode Rejection Ratio

> 100dB at 70dB gain Mic Input:

Digital I/O

Sync Input Sample Rate: 30kHz - 100kHz

Output Sample Rates 32kHz, 44.1kHz, 48kHz, & 96kHz

(Using Onboard Clock):

Output Sample Width: 16, 20, 24 bit

Output

Power (S2-PSU):

Headphone Output Load: >45 ohms 400 ohms recommended Maximum Output +26dBu balanced

into 2k or greater (Analogue): Power

Filtered IEC, switchable 115V,

230V, fused, 210W max.


S2 Mixer Weights and Boxed Dimensions

Mixer Type	Width (cm)	Depth (cm)	Height (cm)	Gross Weight (kg)	Nett Weight (kg)
S2-30	137	70	45	36	34
S2-25	100	70	45	33	31
S2-20	100	70	45	30	28
S2-15	100	70	45	27	25.5
S2-10	60	70	45	24	22.5
S2-05	60	70	45	21	19.5

Notes: Weights are approximate and based on a mixer chassis loaded with channels.

S2 Mixer Viewed from Side Profile

S2 Placement in Cut-Out Viewed from Above

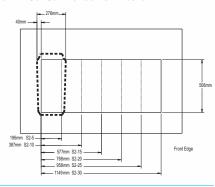

www.sonifex.co.uk

Distributed By:

DAVE LANGER (Creative Services) 27 Cavendish Road, Salford, M7 4WP, England. Telephone: 44 161 740 7171 Facsimilie: 44 161 792 9595

ork No.: AW10173A Stock Code: 30-216